

QUICK START

REVOLUTION 32 CABINET™



VIDEO INSTRUCTIONS:
<https://vimeo.com/235852489>



DETAILED INSTRUCTIONS:
Visit our website and press the support button.



x4



x2



x2



x2



x4



x2



x1



x1



x1




x1*

** US, UK and EU version Revolution 32 Cabinets include a combination padlock with no keys.


* UK and EU regions will have the power cord included with the PDU Kit.

1


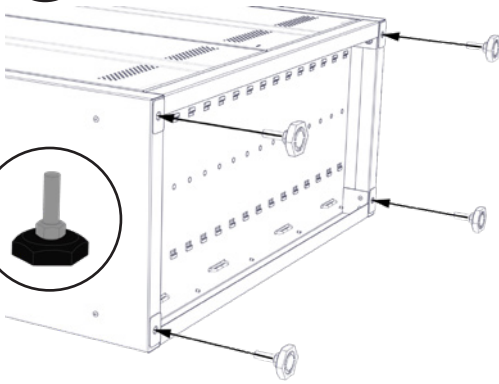


NOTE: UK and EU customers will need to install the Power Distribution Units (PDU). See PDU Kit manual.

2

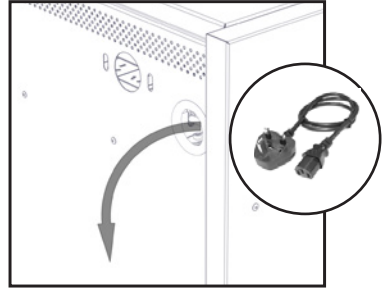




3

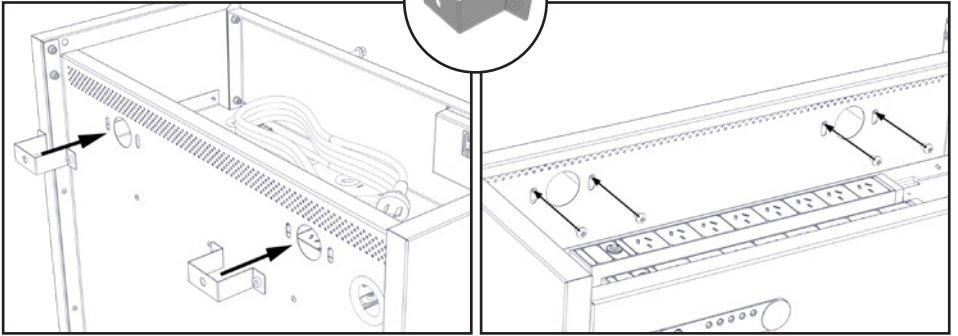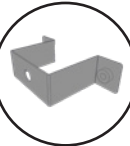


4




MUST BOLT TO WALL FOR SAFE USE

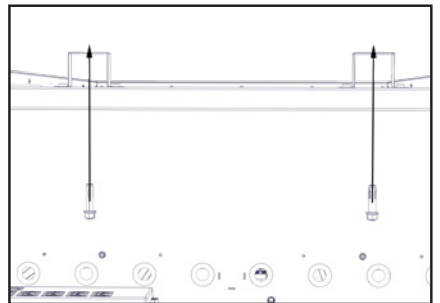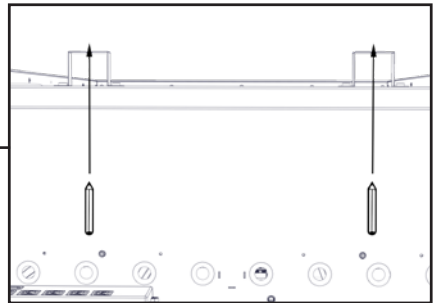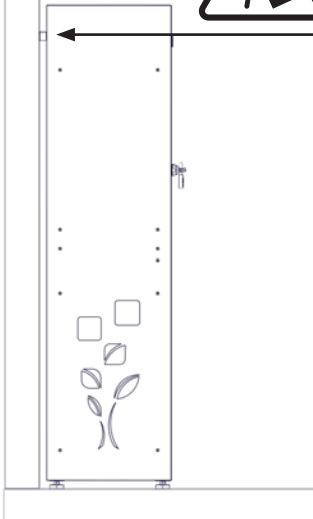


5

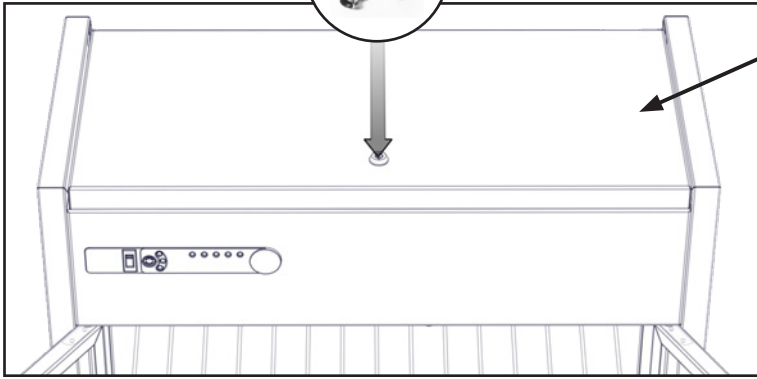



6

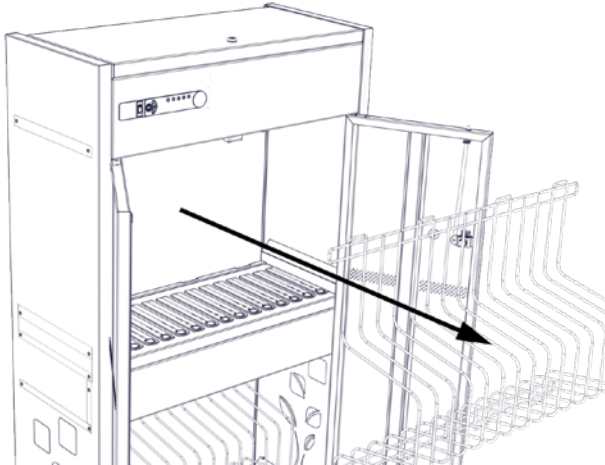


7

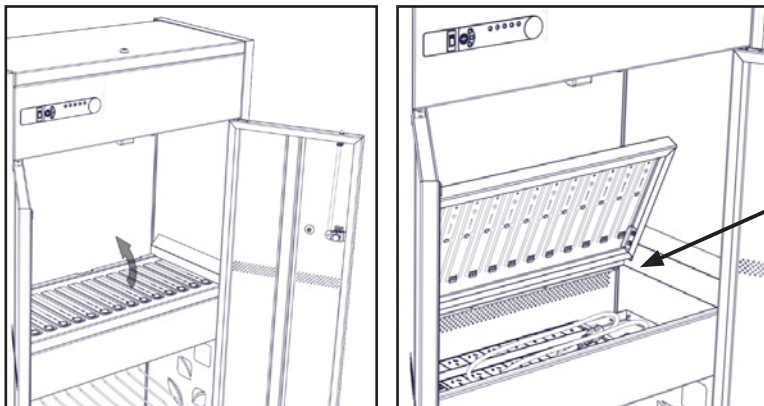


8

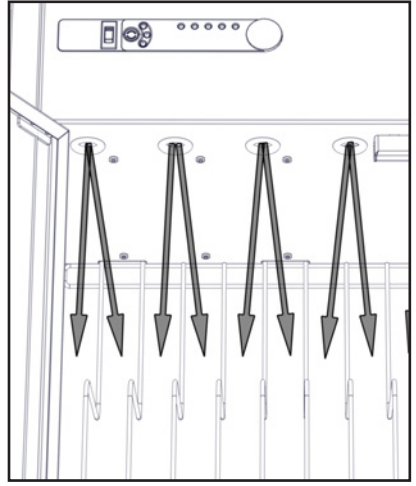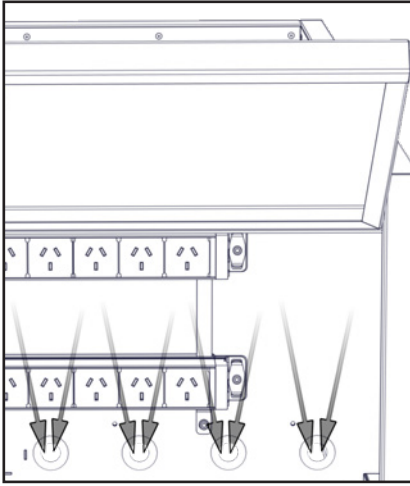

9

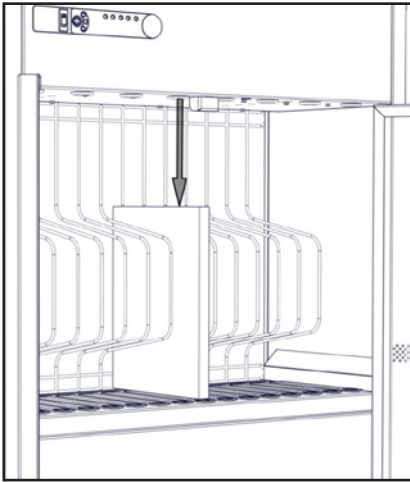

10

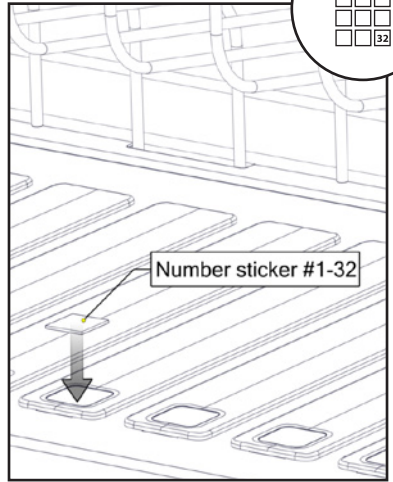

11

Visit our website for more details



VISIT:

www.lockncharge.com (International site)

www.pclocs.com.au (Australia and New Zealand)